

Protection Guard Guide and Installation

A Protection Guard can be added to the Intake-pit filter to avoid direct collision with the filter. The Guard is meant as a notification to avoid collision with the filter before damaging the filter.

The guard can be placed at any height wanted and the numbers of guards can be variant depending the customers' wishes.

In general there are 3 guard sizes – one for each filter size:

Filter	Guard Order No
JM 16	42955
JM 20	42956
JM 24	42945

The Guard is mounted on the front of the filter at the desired height to avoid collision. The guard is mounted directly onto the filter with 4 self tapping screws at the desired height. The screws must fit a Ø7 hole and the 2 mm sheet metal on the filter.

